
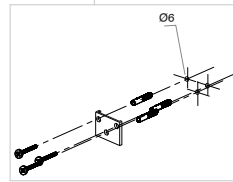
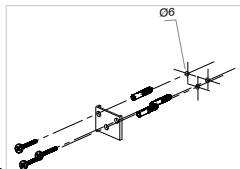


INSTRUCCIONES DE MONTAJE
FITTING INSTRUCTIONS
NOTICE DE MONTAGE

Espejo 60 cm 60 cm mirror Miroir 60 cm

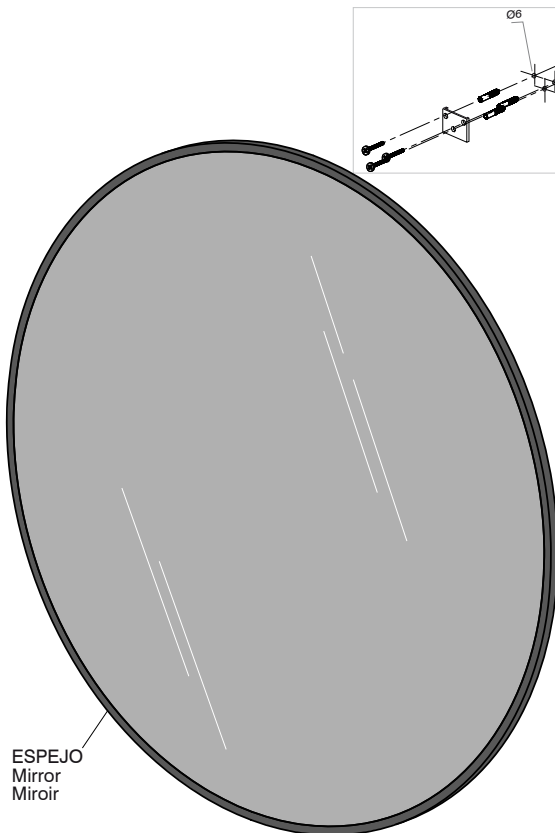

HERRAMIENTA NECESARIA


Necessary tools Outils nécessaires

- TALADRO con BROCA VIDIA ø 6 mm
- DRILL with ø 6 mm drill
- PERCEUSE avec FORÉT ø 6 mm
- DESTORNILLADOR Punta Phillips
- Phillips tip screwdriver
- Tournevis cruciforme

2X CONJUNTO FIJACION ESPEJO



2x Mirror fixing group 2x Ensemble de fixation del miroir

- PLACA Fijación Espejo
- Fixing plate
- Plaque de fixation
- 3x Tornillo Ø4x40
- 3x Screw Ø4x40
- 3x Vis Ø4x40
- 3x Taco Nylon Ø6
- 3x nylon wall plug Ø6
- 3x Cheville Nylon Ø6

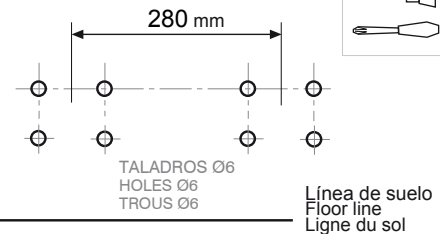

- 1 - MARCAR los agujeros a las DISTANCIAS indicadas en la figura, empleando la PLACA COMO PLANTILLA.
- MARK the holes in the wall as measures in figure 1.
- SIGNALER les trous aux DISTANCES indiquées sur le schéma, en utilisant la plaque comme repère.
- 2 - TALADRAR la pared con BROCA DE VIDIA de Ø6.
- DRILL the wall with Ø6 mm drill.
- PERCER le mur avec le FORET de Ø6.
- 3 - INTRODUCIR los TACOS Ø6 en los agujeros.
- INTRODUCE the plugs Ø 6 in the holes.
- INTRODUIRE les CHEVILLES Ø6 dans les trous.
- 4 - ATORNILLAR LAS PLACAS a la pared.
- SCREW the plates to the wall.
- VISSER LES PLAQUES au mur.

MONTAJE ASSEMBLY MONTAGE


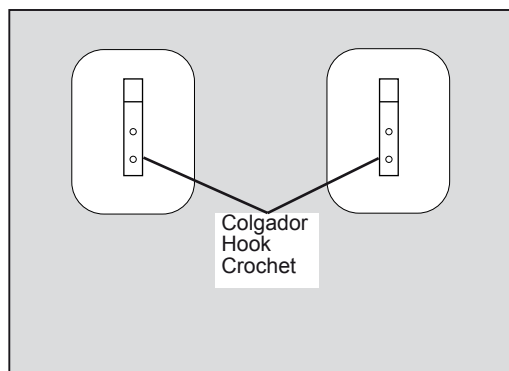
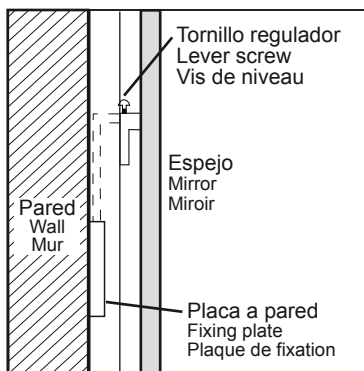


- Alinear el colgador con el carril y deslizar
- Line the hook up with the plate and slide
- Aligner le crochet avec la plaque et coulisser

- Si el espejo no queda recto, regular la altura del espejo con el tornillo de regulación
- If the mirror is not straight yet, regulate the height of the mirror with the lever screw.
- Si le miroir n'est pas droit, régler la hauteur du miroir avec la vis de niveau.

FITTING INSTRUCTIONS

23 5/8 " mirror

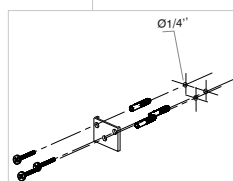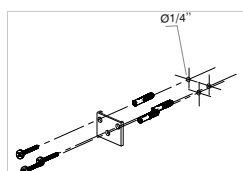
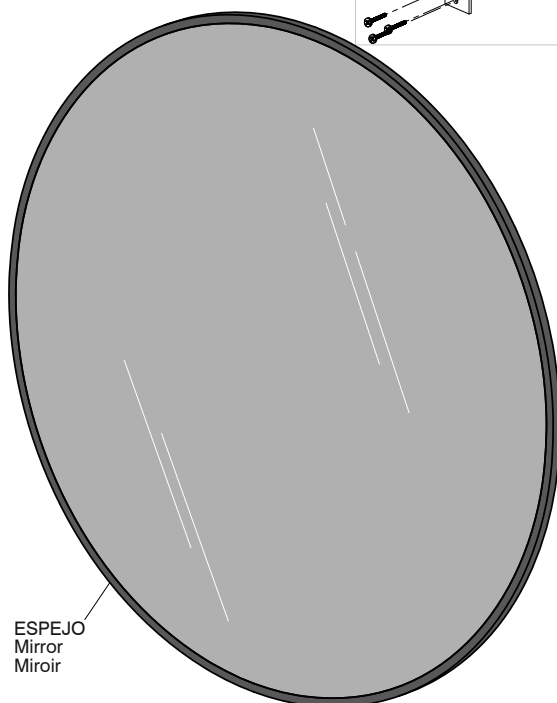


NECESSARY TOOLS

- DRILL with $\varnothing 1/4$ " drill
- Philips tip screwdriver

2X MIRROR FIXING GROUP



- Fixing plate
- 3x Screw 3/16 " x 1 9/16 "
- 3x nylon wall plug $\varnothing 1/4$ "

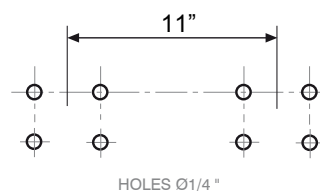HOLES $\varnothing 1/4$ "

Floor line

- 1 - MARK the holes in the wall as measures in figure 1.
- 2 - DRILL the wall with $\varnothing 1/4$ " drill.
- 3 - INTRODUCE the plugs $\varnothing 1/4$ " in the holes.
- 4 - SCREW the plates to the wall.

ASSEMBLY

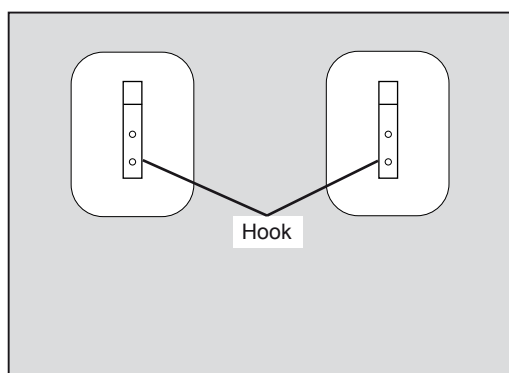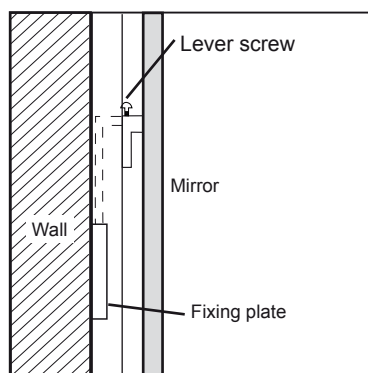

- Line the hook up with the plate and slide

- If the mirror is not straight yet, regulate the height of the mirror with the lever screw.

SERIE/COLLECTION LOUNGE

MATERIAS PRIMAS MATIERES PREMIERES RAW MATERIALS	ACABADOS FINITIONS FINISHES	HERRAJES PIECES DETACHES STEEL PIECES
☐ Aglomerado melamínico hidrofugo Melamine hydrofuge Agglomerate melamine waterproof ☐ Aglomerado melamínico Agloméré melaminique Melaminic agglomerate ☐ Contrachapado Contreplacage Veneered ☐ Madera maciza Bois massif Solid wood ☒ MDF MDF MDF ☐ Acero inoxidable Acier inoxydable Stainless steel ☐ Aluminio Aluminium Aluminium ☐ Vidrio Verre Glass ☐ Vidrio securizado Verre sécurisé Toughed glass ☐ Mármol Marbre Marble ☐ Prefabricado Préfabriqués Prefabricated ☐ Latón cromado Laiton chromé Chrome brass ☐ Polímeros Pymères Polymeric ☒ Otros Autres Others	☒ Lacado/color Laqué/couleur Laques/colour ☐ Lacado/madera Laqué/bois Laques/wood ☐ Polilaminado Poli-laminés Polilaminated	☐ Acero inoxidable Acier inoxydable Stainless steel ☐ Aluminio Aluminium Aluminium ☒ Metal Métal Metal ☐ Madera Bois Wood ☐ Vidrio Verre Glass ☐ Plástico Plastiques Plastic ☐ Galvanizado Galvanisés Galvanised ☐ Epoxy Epoxy Epoxy